

DC235 Visual Presenter

Quick Start Guide



Important

To download the latest version of Quick Start Guide, multilingual user manual, software, or driver, etc., please visit Lumens <http://www.lumens.com.tw/goto.htm>

1. Package Content

DC235



Quick Start Guide



User Manual

(For download of other language versions, please visit Lumens website)



Base Installation Guide




Download Card



USB Cable



Power Cord

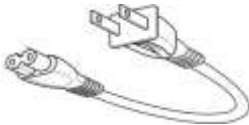

Appearance may vary with country/region.

Microscope Adapter



Software Bag




Backlight (Optional)



Padded Carry Bag (Optional)



2. System Diagram

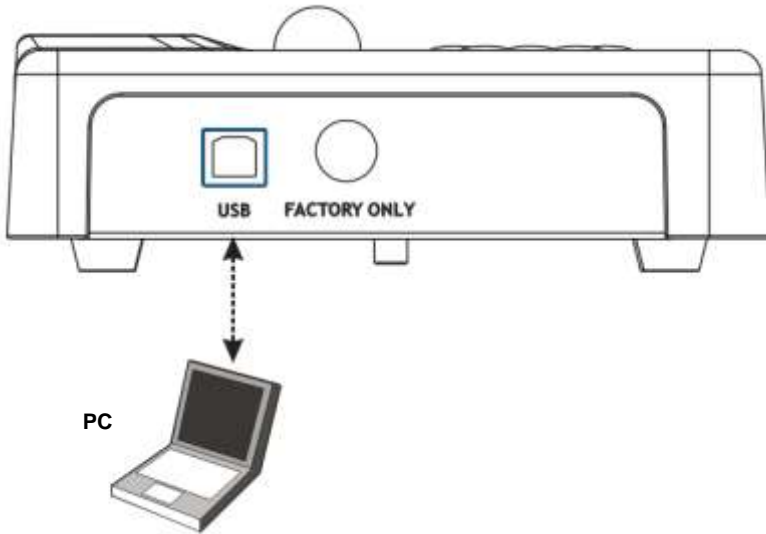


3. Mounting the DC235 at Desktop

1. Please set up the DIP Switch settings first. Refer to [chapter 5 “DIP Switch Settings” in the DC235 user manual.](#)
2. Please refer to the [Base Installation Guide](#) for installation instructions for all parts.

4. Connecting Devices


4.1 Step 1: Plugging in the Power Outlet

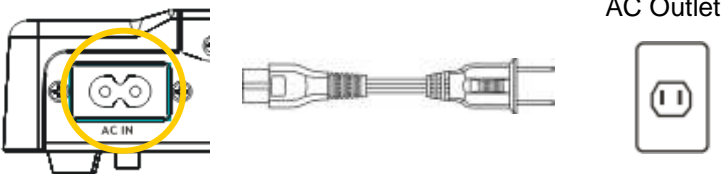

<Note> : Appearance of power cord may vary with countries/regions.


4.2 Step 2: Connecting to a Computer

Connecting to a computer through USB, then install the supplied USB Driver and **queue** program. Please refer to the [DC235 user manual](#)

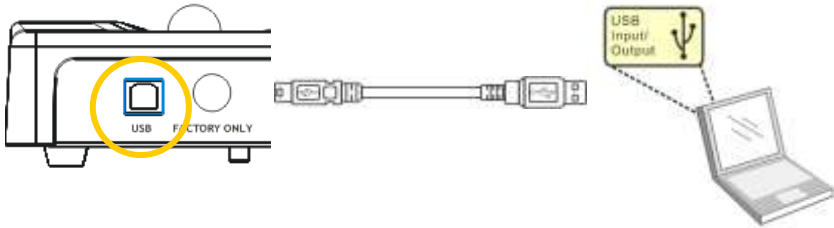

5. Start Using the DC235

5.1 Turn on the DC235

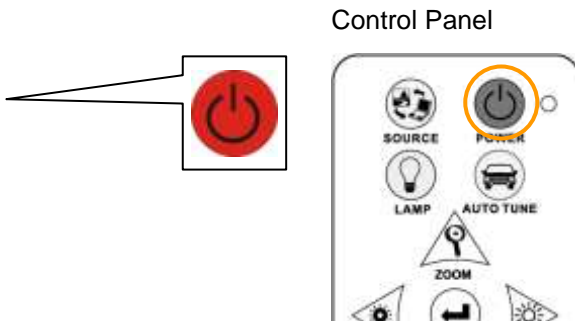

- Once DC235 is turned on, the LED on the **control panel** will flash a few times and stay lit. Please contact your distributor if the LED is not on.

*For detailed menu function introduction and operation instructions, please refer to the [user manual](#).